

TABLE OF CONTENTS

PREFACE xv

ACKNOWLEDGMENTS xvii

DEDICATION xx

ABOUT THE AUTHOR xx

FEATURES OF THE TEXT xxi



SECTION 1

THE AUTOMOBILE INDUSTRY

CHAPTER 1

Introduction to the Automobile 2

Introduction 2 • Body and Chassis 2 • Engine Parts and Operation 3 • Engine Support Systems 5 • The Powertrain 9 • Accessory Systems 10 • History and Development of the Automobile 10

CHAPTER 2

Automotive Careers and Technician Certification 14

Introduction 14 • Automotive Career Opportunities 14 • Technician Certification and Licensing 16 • Technician Skill Levels and Pay 18 • Other Areas of Specialization 19 • Other Automotive Careers 20 • On the Job as an Automotive Technician 21



SECTION 2

SHOP PROCEDURES, SAFETY, TOOLS, AND EQUIPMENT

CHAPTER 3

Shop Safety 24

Introduction 24 • General Personal Safety 24 • Fire Safety 26 • Fire Extinguishers 26 • Flammable Materials 28 • Fuel Fires 28 • Electrical Fires 29 • Shop Habits 29 • Electrical Safety Precautions 30 • Cooling Fan Safety 31 • Coolant Burns 31 • General Hand Tool Safety 32 • Vise Safety 32 • Puller Safety 32 • Machinery Safety 32 • Electric Drill Safety 33 • Grinder Safety 33 • Wire Wheel Safety 33 • Compressed

Air Safety 33 • Impact Wrench Safety 34 • Air Chisel Safety 34 • Die Grinder/Air Drill Safety 34 • Press Safety 34 • General Lifting Safety 35 • Hydraulic Floor Jack (Service Jack) Safety 35 • Shop Crane (Engine Hoist) Safety 35 • Transmission Jack Safety 36 • Battery Safety 36 • Refrigerant Safety 38 • General Safety around Automobiles 38 • Hot Tank Safety Precautions 38 • Hazardous Materials and Environmental Safety 38 • Hazardous Communication Standards 40 • Material Safety Data Sheets 40 • Hazardous Materials Common to the Automotive Industry 41 • Cleaning Solvent Safety Precautions 42 • Skin Care Safety Precautions 42 • Breathing Safety 42

CHAPTER 4

Shop Management, Service Records, and Parts 45

Introduction 45 • Customer Relations 45 • Service Records 46 • Keep the Car Clean 47 • Linen Service 47 • Wholesale and Retail Distribution of Auto Parts 48

CHAPTER 5

Locating Service Information and Specifications 51

Introduction 51 • Service Literature 51 • Manufacturers' Service Information 53 • Generic Service Manuals 53 • Lubrication Service Manual 55 • Owner's Manual 55 • Owners' Workshop Manuals 55 • Electronic Service Information 55 • Technical Service Bulletins 57 • Hot Line Services 58 • Trade Magazines 59

CHAPTER 6

Measuring Tools and Systems 60

Introduction 60 • Metric System 60 • Measuring Tools 61 • Precision Measuring Tools 62

CHAPTER 7

Hardware, Fasteners, Drills, and Thread Repair 72

Introduction 72 • Characteristics of Fasteners 72 • Fastener Failures 75 • Drill Bits 76 • Taps and Threads 78 • Dies 80 • Repairing Broken Fasteners 80

CHAPTER 8

Shop Tools 88

Introduction 88 • Tools of the Trade 88 • Hand Tools 88 • Pullers 99 • Air Tools 101 • Special Service Tools 105

CHAPTER 9**General Shop Equipment 106**

Shop Equipment 106 • Hydraulic Equipment 106 • Shop Electric Machinery 111 • Other Electric Equipment 114 • Other Shop Equipment 114

CHAPTER 10**Cleaning Equipment and Methods 118**

Introduction 118 • General Shop Housekeeping Practices 118 • Cleaning Methods 119 • Cleaning the Outside of the Engine 120 • Environmental Concerns with Engine Cleaning 120 • Cleaning Internal Parts 120 • Chemical Cleaning 121 • Thermal Cleaning 128 • Vibratory Parts Cleaners 129 • Other Cleaning Methods 129 • Marking Clean Parts 129

CHAPTER 11**Lifting Equipment and Air Compressors 130**

Introduction 130 • Lift Types 130 • Frame-Contact Lifts 131 • Wheel-Contact Lifts 132 • Wheel-Free Jacks 133 • In-Ground Lifts 133 • Surface Mount Lifts 135 • Lift Safety 136 • Air Compressors 137

**SECTION 3****VEHICLE INSPECTION (LUBRICATION/SAFETY CHECK)****CHAPTER 12****Engine Lubrication 142**

Introduction 142 • Engine Oil 143 • Engine Oil Licensing and Certification 146 • Oil Additives 147 • Changing Engine Oil 150 • Oil Filter 152 • Changing the Oil Filter 154

CHAPTER 13**Underhood and Body Inspection (Vehicle on Ground) 157**

Introduction 157 • Brake System Inspection 157 • On-Ground Steering and Suspension Checks 159 • Fuel System Inspection 161 • Cooling System Inspection 162 • Belt Inspection 163 • Electrical System Inspection 164 • Check Operation of Lights 164 • Visibility Checks 165 • Other Safety Checks and Service 167

CHAPTER 14**Undercar Inspection and Service 171**

Introduction 171 • Tire Visual Inspection 171 • Undercar Brake Checks 172 • Exhaust System Inspection 173 • Chassis Lubrication 173 • Suspension and Steering Checks 176 • Driveline Checks 178

**SECTION 4****BRAKES AND TIRES****CHAPTER 15****Brake Fundamentals 184**

Introduction 184 • Brake Linings 184 • Drum and Disc Brakes 185 • Hydraulic Brake System Operation 185 • Hydraulic Brake Fluid 187 • Brake Hose 188 • Brake Tubing 188 • Hydraulic System Operation 189 • Low Brake Pedal 189 • Split Hydraulic System 193 • Quick Take-Up Master Cylinder 193 • Drum Brakes 194 • Drum Brake Adjustment 195 • Disc Brakes 197 • Hydraulic System Valves and Switches 200 • Hydraulic Control Valves 201 • Power Brakes 203 • Parking Brake 206 • Types of Parking Brakes 207 • Stoplight Switches 208 • Antilock Brakes 208

CHAPTER 16**Brake Service 210**

Introduction 210 • Brake Inspection 210 • Check Brake Pedal Feel 210 • Master Cylinder Inspection 210 • Brake Diagnosis 212 • Undercar Checks 212 • Disc Brake Inspection 212 • Inspecting Drum Brake Assemblies 216 • Brake Fluid Service 219 • Routine Brake Fluid Replacement 219 • Bleeding Brakes 220 • Brake Bleeding Methods 221 • Adjusting Brakes 225 • Master Cylinder Service 226 • Master Cylinder Removal 226 • Master Cylinder Disassembly 226 • Bench Bleeding a Master Cylinder 227 • Brake Job 228 • Drum Brake Lining Removal 228 • Rebuilding Hydraulic Cylinders 229 • Reassembling a Wheel Cylinder 230 • Removing Wheel Cylinders 231 • Replacing Drum Brake Shoes 231 • Adjusting Drum Brake Clearance 231 • Drum and Rotor Service 232 • Drum Service 233 • Rotor Service 235 •

On-Vehicle Rotor Machining 237 • Disc Brake Service 238 • Rear Disc Pad Installation 240 • Rebuilt Calipers 241 • Disc Caliper Rebuilding 241 • Selecting Brake Linings 243 • Disc Brake Noise 244 • Parking Brake Cable Service 246 • Vacuum Power Brake Service 246 • Brake Warning Lamp Diagnosis 251 • Antilock Brake System (ABS) Service 251

CHAPTER 17

Antilock Brakes, Traction, and Stability Control 252

Introduction 252 • Antilock Brakes 252 • Antilock Brake System Components 253 • Types of Antilock Brake Systems 255 • Two-Wheel ABS 258 • Antilock Brake System Operation 259 • Traction Control System 262 • Antilock Brake (ABS) Service 263 • ABS Brake Fluid Service 265

CHAPTER 18

Bearings, Seals, and Greases 271

Introduction 271 • Plain Bearings 271 • Frictionless Bearings 271 • Bearing Loads 271 • Ball Bearings 271 • Roller Bearings 273 • Wheel Bearings 275 • Greases 276 • Wheel Bearing Seals 279 • Seal Materials and Design 280 • Seal Tolerance 280 • Wheel Bearing Diagnosis and Service 281 • Wheel Bearing Adjustment 282 • Disc Brake Caliper Removal 283 • Repacking Wheel Bearings 283 • Bearing Inspection and Diagnosis 285 • Diagnosing Wheel Bearing Noise 288 • Replacing Bearing Races 289 • Servicing Front-Wheel-Drive Bearings 289

CHAPTER 19

Tire and Wheel Theory 291

Introduction 291 • Tire Construction 291 • Tubeless Tires 292 • Tire Tread 292 • Tire Tread Material 293 • Tire Cord 294 • Tire Ply Design 294 • Tire Sidewall Markings 295 • Load Rating 300 • All-Season Tires 301 • Snow Tires 301 • Tire Pressure Monitoring System 304 • Uniform Tire Quality Grading 305 • Traction Grade 305 • Changing Tire Size 305 • Wheels 307 • Custom Wheels 308 • Lug Studs 309 • Lug Nuts 309 • Tire Valve Stems 309

CHAPTER 20

Tire and Wheel Service 311

Introduction 311 • Tire Inflation 311 • Checking Air Pressure 311 • Adjusting Tire Pressure 313 •

Tire Wear 314 • Sidewall Checks 315 • Tire Rotation 315 • Removing and Tightening Lug Nuts 317 • Repairing Wheel Studs 318 • Removing and Mounting Tires on Rims 319 • Inspecting the Tire and Wheel 322 • Valve Stem Service 322 • Rubber Lubricant 323 • Install the Tire 323 • Mounting High-Performance Tires 326 • Bead Roller Tire Changer 327 • Tire Runout 327 • Tire Repair 328 • Repairing a Tire 329 • Preparing a Tire for Repair 330 • Patching the Tire 331 • Tire and Wheel Balance 332 • Types of Wheel Balance 334 • Couple Imbalance 335 • Dynamic Balance 336 • Computer Balancers 336 • Centering the Wheel on the Balancer 336 • Match Mounting 339 • Force Variation 339 • Installing the Wheel 340 • Tire Pressure Monitoring System Service 341



SECTION 5

SUSPENSION, STEERING, ALIGNMENT

CHAPTER 21

Suspension Fundamentals 344

Introduction 344 • Suspension 344 • Frame and Suspension Designs 345 • Springs 345 • Suspension Construction 347 • Suspension Types 349 • High-Performance Suspensions 350 • Shock Absorbers 351 • Hydraulic Shock Absorber Operation 352 • Compression and Rebound Resistance 354 • Bump Stops and Limiters 354 • Gas Shocks 355 • Air Shocks/Leveling Devices 356 • Other Front End Parts 357 • Stabilizer Bar 357 • Suspension Leveling Systems 357

CHAPTER 22

Suspension System Service 363

Introduction 363 • Diagnosing Suspension System Problems 363 • Shock Absorber Service 364 • Testing a Shock 364 • Macpherson Strut Service 366 • Inspect the Upper Strut Bearing 368 • Install the Coil Spring 368 • Reinstall the Strut Assembly 368 • Suspension Bushing Service 368 • Strut Rod Bushing Service 369 • Stabilizer Bar Service 369 • Spindle Service 370 • Ball Joint Service 370 • Measuring Ball Joint Wear 371 •

Separating Tapered Connections 372 • Replacing a Ball Joint 372 • Coil Spring Service 373 • Adjusting Spring Height 373 • Coil Spring Replacement 373 • SLA Coil Spring Replacement 374 • Wheel Alignment 376 • Electronic Suspension Service 376 • Electronically Controlled Shock Absorbers 377

CHAPTER 23

Steering Fundamentals 379

Steering Systems 379 • Steering Gears 379 • Recirculating Ball and Nut Steering Gear 380 • Rack-and-Pinion Steering 380 • Steering Linkage 381 • Parallelogram Steering Linkage 382 • Ball Sockets 382 • Tie-Rods 382 • Steering Arm 383 • Rack-and-Pinion Steering Linkage 384 • Steering Column 384 • Power Steering 386 • Power Steering Pump 386 • Types of Power Steering 387 • Electronically Controlled Variable Effort Power Steering 388 • Electronically Controlled Steering Systems 391

CHAPTER 24

Steering System Service 394

Introduction 394 • Fluid Level Checks 394 • Type of Fluid 394 • Diagnosing Steering Problems 395 • Noise Diagnosis 395 • Hard Steering 395 • Tire Wear 395 • Steering Part Inspection 395 • Steering Linkage Inspection 395 • Steering Gear Looseness 395 • Parallelogram Inspection 395 • Rack-and-Pinion Steering Linkage Inspection 396 • Steering Linkage Repairs 396 • Idler Arm Replacement 396 • Pitman Arm Replacement 397 • Tie-Rod End Replacement 397 • Rack-and-Pinion Tie-Rods 398 • Steering Wheel, Column, and Air Bag Service 398 • Air Bag Service 398 • Steering Wheel Service 401 • Steering Column Service 401 • Steering Gear Service 401 • Manual Rack Service 402 • Rack-and-Pinion Looseness 402 • Power Steering System Service 402 • Power Steering System Flushing 402 • Bleeding the System of Air 403 • Power Steering Pump Replacement 404 • Repairing Power Steering Pump Oil Leaks 404 • Power Steering Pressure Diagnosis 404 • Power Steering Pump Service 405 • Power Steering Hoses 406 • Refilling the Power Steering System 406 • Power Steering Gear Service 406 • Replacing Rack-and-Pinion Units 406 • Variable Power Steering Service 408 • Electronically Controlled Power Steering System Service 408

CHAPTER 25


Wheel Alignment Fundamentals 409

Introduction 409 • Wheel Alignment Angles 409 • Toe 409 • Camber 410 • Caster 411 • Steering Axis Inclination 412 • Scrub Radius 413 • Turning Radius 414 • Tracking 415 • Setback 415 • Special Handling Characteristics 415

CHAPTER 26

Wheel Alignment Service 417

Introduction 417 • Prealignment Inspection 417 • Tire Wear Inspection 417 • Ride Height Check 419 • Toe Change 419 • Torque Steer 420 • Suspension Looseness 420 • Test Drive 421 • Tire Checks 421 • Inspection Checklist 422 • Wheel Alignment Procedures 422 • Measuring Alignment 423 • Measuring Camber 424 • Measuring Caster 424 • Road Crown and Pull 424 • Measuring Steering Axis Inclination 427 • Measuring Toe 427 • Adjusting Toe 428 • Centering a Steering Wheel 431 • Checking for Toe Change 432 • Measuring Turning Radius 432 • General Wheel Alignment Rules 433 • Four-Wheel Alignment 434 • Performing a Four-Wheel Alignment 435 • Compensating the Alignment Heads 435 • Measuring Caster and Camber 436 • Adjusting Rear-Wheel Alignment 436

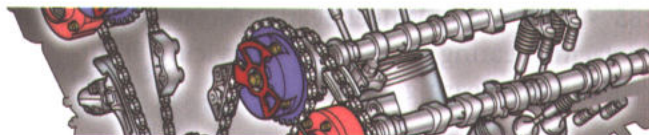

SECTION 6

ENGINE OPERATION

CHAPTER 27

Introduction to the Engine 439

Introduction 439 • Basic Engine Operation 439 • Four-Stroke Engine Operation 440 • Engine Upper End 441 • Valve Train 441 • Cylinder Head 442 • Engine Front 444 • Cylinder Block Assembly (Lower End) 445 • Short Block and Long Block 446

CHAPTER 28

Engine Classifications and Advanced Transportation Technologies 451

Introduction 451 • Engine Classifications 451 • Cylinder Arrangement 452 • Firing Order 453 • Engine Cooling 453 • Valve Location 454 • Camshaft Location 455 • Other Cylinder Head

Variations 455 • Combustion Chamber Designs 456 • Spark and Compression Ignition 457 • Alternate Engines 459 • New Generation Vehicles 460 • Regenerative Braking 460 • Hybrid Vehicles 460 • Types of Hybrids 462 • Hybrid Vehicle Service and Safety 465 • Hydraulic Hybrid Vehicles 466 • Fuel Cell Electric Vehicles (FCEVs) 467

CHAPTER 29

Engine Size and Measurements 470

Introduction 470 • Engine Size Measurements 470 • Compression Ratio 472 • Physical Principles of Work 474 • Torque 474 • Horsepower 475 • Dynamometer 476 • Dynamometer Safety Concerns 479 • Engine Efficiency 479 • Mean Effective Pressure 481

CHAPTER 30

Engine Upper End 482

Introduction 482 • Cylinder Head Construction 482 • Valve Guides 483 • Valve Guide Seals 483 • Valves 485 • Retainers and Valve Locks 488 • Valve Springs 488 • Pushrods and Rocker Arms 489 • Camshaft 490 • Number of Cams and Lobes 490 • Camshaft Performance 491 • Valve Lifters and Lash Adjusters 492 • Roller Cam and Lifters 493 • Hydraulic Lifters 493 • Camshaft Drives 495 • Valve Timing 497 • Variable Valve Timing 498 • Active Fuel Management/Displacement on Demand 500

CHAPTER 31

Engine Lower End and Lubrication System Theory 503

Introduction 503 • Cylinder Block Construction 503 • Core Plugs 504 • Cylinder Bore 504 • Cylinder Sleeves 505 • Main Bearing Caps 505 • Lifter Bores 505 • Crankshaft Design 505 • Crankshaft End Thrust 506 • Direction of Crankshaft Rotation 507 • Vibration Damper 507 • Crankshaft Hardness 507 • Bearings 507 • Connecting Rods 510 • Pistons 511 • Piston Head 511 • Piston Ring Grooves 511 • Heat Transfer 511 • Cast and Forged Pistons 512 • Piston Skirt 512 • Piston Pin Offset 513 • Piston Pins 514 • Piston Rings 515 • Compression Rings 515 • Compression Ring Design 516 • Oil Control Rings 518 • Engine Balancing 518 • The Lubrication System 519 • Oil Pumps 519 • Pressure Relief Valve 521 • Oil Pump Screen By-Pass Valve 521 • Oil Pressure 522 • Windage Tray and Baffles 522 • Dry Sump Lubrication Systems 522



SECTION 7

AUTOMOTIVE ENGINE SERVICE AND REPAIR

CHAPTER 32

Diagnosing Engine Mechanical Problems 525

Introduction 525 • Diagnosing Problems before a Repair 525 • Oil Consumption 525 • Causes of Oil Consumption 526 • Testing for Oil Leaks 528 • Engine Performance and Compression Loss 529 • Engine Noises 530 • Engine Knocks 530 • Oil Pressure Problems 534 • Cooling System Problems 535 • Internal Engine Leakage 535 • Seized Engine 537 • Electronic Failures/Engine Damage 537 • Engine Performance and Fuel Mixture Problems 538

CHAPTER 33

Engine Removal and Disassembly 539

Introduction 539 • Engine Removal 539 • Engine Disassembly 551 • Engines with Pushrods 554 • Overhead Cam Cylinder Head Removal 556 • Cylinder Block Disassembly 557

CHAPTER 34

Engine Sealing, Gaskets, Fastener Torque 563

Introduction 563 • Clamping Force 563 • Torque and Friction 563 • Torque Wrenches 564 • Torque-to-Yield 565 • Torque by Degrees 566 • Fastener Clamping Load 566 • Gaskets and Seals 567 • Cleaning the Head 571 • Head Gasket Installation 573 • Other Engine Gaskets 573 • Valve Cover, Timing Cover, and Oil Pan Service 573 • Gasket Sealers 578 • Silicone-RTV Sealant 579 • Rear Main Seals 582 • Transmission Front Pump Seal 583

CHAPTER 35

Engine Diagnosis and Service: Cylinder Head and Valve Train 584

Introduction 584 • Head Disassembly 584 • Carbon Removal 588 • Cylinder Head Inspection 589 • Resurfacing by Grinding, Cutting, or Sanding 590 • Straightening Cylinder Heads 590 • Crack Inspection 591 • Crack Repair 592 • Checking Valve Springs 592 • Checking Valve Stems 592 • Valve Guide Service 593 • Guide Repair 594 • Grinding Valves 595 • Grinding Valve Seats 596 • Checking Valve Stem Installed Height 597 • Solvent Testing the Valve and Seat 597 • Reassembling the

Head 598 • Valve Guide Seal Installation 599 • Install the Valve and Spring Assembly 599 • Pushrod Engine Rocker Arm Service 600 • Inspect Pushrods 600 • Inspect OHC Camshaft 600 • Reassembling OHC Heads 600 • Camshaft Service 602 • Lifter Service 602 • Cam and Lifter Break-In 603 • Timing Chain and Belt Service 603 • Timing Belt Service 603 • Timing Belt Replacement 604 • Timing Chain Service 606

CHAPTER 36

Engine Diagnosis and Service: Block, Crankshaft, Bearings, and Lubrication System 609

Introduction 609 • Cleaning the Block 609 • Oil and Water Plug Removal 609 • Oil Gallery Plug Installation 611 • Inspect and Clean Lifter Bores 611 • Checking Main Bearing Bore Alignment 611 • Check the Deck Surface for Flatness 613 • Clean All Threaded Holes 613 • Inspecting Cylinder Bores 613 • Measuring the Bore 614 • Deglazing the Cylinder Bore 615 • Clean the Block of Grit 617 • Boring for Oversized Pistons 617 • Block Distortion 618 • Honing after Boring 619 • Sleeves 620 • Cam Bearing Installation (Cam-in-Block Engines) 620 • Front Cam Bearing Installation 622 • Checking Crankshaft Condition 622 • Crankshaft and Bearing Wear 623 • Crankshaft Journal Tolerance 624 • Regrinding the Crankshaft 624 • Measuring Bearing Clearance with Plastigage 625 • Lubrication System Service 627 • Checking Oil Pumps for Wear 627 • Oil Pump Screen Service 628 • Oil Pump Failure 628 • Installing the Oil Pump 629

CHAPTER 37

Engine Diagnosis and Service: Piston, Piston Rings, Connecting Rod, Engine Balancing 630

Introduction 630 • Piston Service 630 • Piston Ring Service 633 • Installing Pins in Connecting Rods 635 • Installing Rings on Pistons 635 • Oil Ring Installation 635 • Connecting Rod Service 636 • Engine Balancing Service 638

CHAPTER 38

Ordering Parts, Short and Long Blocks, Engine Assembly 642

Introduction 642 • Ordering Parts 642 • Engine Kits 642 • Determining Part Sizes 643 • Types of Engine Rebuilds 644 • Selecting the Correct Replacement Engine 645 • Warranty 645 • Reassembly 645 • Begin Reassembly 645 • Prepare the Crankshaft for Installation 646 • Install the Crank 647 • Install the Cylinder Heads 654 • Install

OHC Heads 654 • Install the Cam Drive (Pushrod Engines) 655 • Install the Oil Pump 656 • Install the Timing Cover 656 • Install the Damper 656 • Install the Oil Pan 657 • Install the Intake Manifold 657 • Install the Thermostat and Water Outlet Housing 657 • Completing the Assembly 658 • Install Exhaust Manifold(s) 658

CHAPTER 39

Engine Installation, Break-In, and In-Chassis Repairs 659

Introduction 659 • Engine Installation 659 • Install Engine Mounts 659 • Install the Engine 659 • Priming the Lubrication System 661 • Pressure Priming 661 • Install Valve Covers 662 • Ignition System Installation and Timing 662 • Engine Starting and Initial Break-In 663 • Valve Clearance Adjustment 664 • Road Test and Break-In 664 • Final Inspection 664 • Returning the Car to the Customer 665 • Engine Repair—Engine in the Vehicle 665 • Valve Job or Head Gasket Repair 665 • Valve Job or Complete Engine Overhaul 666 • Head Gasket Problems 666 • In-Chassis Lower End Repairs 666 • Removing the Oil Pan 666 • Remove the Piston and Rod Assembly 668 • Remove the Timing Cover 668 • Freewheeling and Interference Engines 668 • Replace the Timing Components 668 • Crankshaft Seal Replacement 669 • Flywheel Ring Gear Service 669



SECTION 8

COOLING SYSTEM, BELTS, HOSES, AND PLUMBING

CHAPTER 40

Cooling System Theory 671

Introduction 671 • Liquid and Air Cooling 671 • Liquid Cooling System Parts 672 • Cooling System Circulation 672 • Coolant 673 • Cooling System Pressure Cap 676 • Coolant Recovery System 677 • Radiator 678 • Thermostat 678 • Temperature Warning Light or Gauge 681 • Fans 682 • Fan Clutch 683 • Radiator Shroud 684 • Heater Core 684

CHAPTER 41

Cooling System Service 685

Introduction 685 • Diagnosing Cooling System Problems 685 • Radiator Cap 686 •

Coolant Service 688 • Testing Coolant Condition and Strength 692 • Thermostat Service 695 • Locating Leaks 698 • External Leaks 698 • Internal Leaks 699 • Recovery Tank Service 702 • Cooling System Repairs 702 • Water Pump Service 703 • Electric Cooling Fan Service 705 • Heater Core Service 705

CHAPTER 42

Automotive Belts 707

Introduction 707 • Belt Material 707 • V-Belts 707 • V-Ribbed Belts 708 • Serpentine Belt Drive 709 • Stretch Belts 709 • Timing Belts 710 • Drive Belt Service 710 • Belt Inspection and Adjustment 711 • Replacing Belts 712

CHAPTER 43

Automotive Hoses 717

Introduction 717 • Hose Construction 717 • Hose Size 717 • Unreinforced Hose 717 • Radiator Hose 717 • Hose Types 717 • Hose Clamps 721 • Hose Inspection 722 • Replacing Hoses 723

CHAPTER 44

Automotive Plumbing: Tubing and Pipe 727

Introduction 727 • Tubing 727 • Flared Connections 729 • Compression Fittings 730 • Pipe Fittings 731 • Shutoff Valves 733 • Tubing Service 733 • Installing Tubing 736 • Transmission Oil Cooler Line Repairs 737 • Nylon Fuel Injection Tubing 737 • Pipe Service 738



SECTION 9

DRIVETRAIN

CHAPTER 45

Clutch Fundamentals 740

Introduction 740 • Clutch Parts and Operation 741 • Clutch Disc 741 • Pressure Plate 742 • Types of Clutch Covers 742 • Coil Spring Clutch 743 • Diaphragm Clutch 743 • Pilot Bearing or Bushing 745 • Release Bearing 745 • Clutch Fork 746 • Clutch Release Methods 746 • Clutch Cable 746 • Hydraulic Clutch Operation 747 • Clutch Free Travel 748 • Dual Clutch Transmissions 748

CHAPTER 46

Clutch Diagnosis and Service 749

Introduction 749 • Diagnosis of Clutch Problem 749 • Clutch Noises 749 • Transmission Noise 750 • Pedal Problems 750 • Slipping Clutch 750 • Dragging Clutch 750 • Oily Clutch Facings 751 • Damaged Friction Surfaces 751 • Chattering or Grabbing Clutch 752 • Clutch Service 752 • Servicing Hydraulic Components 753 • Clutch Replacement 754 • Removing a Transmission or Transaxle 754 • Clutch Removal 754 • Flywheel Removal 756 • Flywheel Starter Ring Gear Replacement 756 • Flywheel Installation 756 • Inspect New Parts 757 • Pilot Bushing Service 757 • Clutch Disc Service 758 • Clutch Cover/Pressure Plate Service 758 • Clutch Installation 758 • Release Bearing Service 760 • Clutch Housing Installation 761

CHAPTER 47

Manual Transmission Fundamentals 763

Introduction 763 • Purpose of a Transmission 763 • Using Gears to Increase Torque 764 • Gear Ratio 764 • Transmission Gear Ranges 765 • Overdrive 765 • Final Drive Ratio 766 • Gear Types and Operation 766 • Spur Gears 767 • Helical Gears 767 • Idler Gears 767 • Transmission Parts 767 • Transmission Lubrication 768 • Transmission Bearings 768 • Transmission Gears and Shafts 768 • Synchronizer Assembly 770 • Gear Shift Mechanisms 772 • Shift Patterns 773 • Transmission Power Flow 773 • Four-Speed Transmission Power Flow 774 • Five-Speed Transmission 776 • Speedometer Drive 776 • Switches and Sensors 776

CHAPTER 48

Manual Transmission Diagnosis and Repair 779

Introduction 779 • Transmission Diagnosis 779 • Lubricant Checks 780 • Transmission Removal 780 • Transmission Disassembly 781 • Disassemble the Mainshaft Assembly 783 • Synchronizer Service 783 • Synchronizer Inspection 784 • Inspect Blocker Rings 785 • Inspect Input Shaft and Mainshaft 785 • Replace Worn Bearings 785 • Reassemble the Transmission 786 • Reassemble the Synchronizers 786 • Reassemble the Mainshaft 786 • End Play 786 • Needle Bearing Installation 786 • Install New Gaskets 787 • Complete the Transmission Reassembly 787 • Install the Transmission 788 • Add Lubricant 789 • Test Drive 789

CHAPTER 49**Automatic Transmission Fundamentals 790**

Introduction 790 • Automatic Transmission Parts 790 • Power Transmission 791 • Flexplate 791 • Torque Converter 792 • Torque Multiplication 792 • Torque Converter Operation 793 • Stator Clutch Operation 795 • Stall Speed 796 • Lock-Up Torque Converters 796 • Planetary Gears 797 • Simple Planetary Gearset 797 • Simple Planetary Operation 798 • Compound Planetary Operation (Simpson) 799 • Driving and Holding Devices 801 • Clutches 801 • Clutch Operation 802 • One-Way Clutches 803 • Bands 804 • Accumulator 804 • Hydraulic System 805 • Fluid Pump 805 • Types of Pumps 805 • Transmission Valves 807 • Pressure Regulator 807 • Hydraulic Valve Body 808 • Transmission Automatic Shift Selection 808 • Governor 809 • Vacuum Modulator 810 • Kickdown Valve 810 • Automatic Transmission Fluid (ATF) 811 • Automatic Transmission Cooling 811 • Auxiliary Cooler/Heat Exchanger 812 • Park Pawl 812 • Electronic Automatic Transmissions 812 • Electronic Automatic Transmission Operation 815 • Electronic Torque Converter Control 815 • Electronic Pressure Control 815 • Transmission Shift Control 816 • Continuously Variable Transmission 818 • Hybrid Planetary Transmission Operation 818

CHAPTER 50**Automatic Transmission Diagnosis and Service 822**

Introduction 822 • Automatic Transmission Identification 823 • Automatic Transmission Maintenance 823 • Transmission Fluid Service 823 • Fluid Level 824 • Check Fluid Condition 824 • Changing Transmission Fluid 824 • Transmission Filter Service 825 • Remove and Replace the Filter 826 • Refill the Transmission 826 • Diagnosis and Repair of Leaks 827 • Leaks from the Converter Housing 827 • Transmission Cooler Line Leak 827 • VSS/Speedometer Drive Gear Leak 828 • Shift Lever Seal Replacement 828 • Pump Seal Replacement 828 • Front Seal Replacement 829 • Pump Bushing Replacement 829 • Reinstalling the Transmission 830 • Rear Oil Seal and Bushing Replacement 831 • Automatic Transmission Problem Diagnosis 831 • Slippage 832 • Transmission Drainback 832 • Noises 835 • Flexplate 835 • Transmission Tests 835 • Valve Body Removal 837 • Transmission

Adjustments 837 • Electronic Transmission Service 839 • More Tests before Transmission Removal 842 • Hybrid Automatic Transmission Service 842 • Remanufactured Automatic Transmissions and Transaxles 842 • Transmission Rebuilding 843 • Transmission Reassembly 845

CHAPTER 51**Driveline Operation 847**

Introduction 847 • Driveshaft (RWD) 848 • Slip Yoke 848 • Universal Joints 849 • Two-Piece Driveshaft 850 • Driveshaft Angle 851 • Constant Velocity Joints 852 • Differential 853 • Differential Construction 853 • Differential Housing 854 • Differential Operation 855 • Differential Gears 856 • Gearsets 856 • Axle Ratio 857 • Limited Slip Differential 857 • Types of Limited Slip Differentials 857 • Drive Axles and Bearings 858 • Semi-Floating Axle Bearing Types 859 • Independent Rear Suspension Axles 860 • Gear Oils 860 • Four-Wheel Drive 861 • Four-Wheel-Drive Axle Assembly 861 • Transfer Case 862 • Locking Hubs 863 • All-Wheel Drive 864

CHAPTER 52**Driveline Diagnosis and Service 866**

Introduction 866 • Driveshaft Diagnosis 866 • Universal Joint Diagnosis and Service 867 • Driveshaft Service 867 • Universal Joint Disassembly 868 • Universal Joint Reassembly 869 • Driveshaft Installation 870 • Two-Piece Driveshaft Service 871 • Differential and Axle Diagnosis and Service 871 • Problem Diagnosis 871 • Axle Bearing Diagnosis 872 • Axle Bearing Service 873 • Removing a Bearing-Retained Axle 873 • Axle Bearing Replacement 874 • Axle Bearing Installation 875 • Reinstall the Axle 876 • Full-Floating Axle Service 876 • Differential Pinion Seal Replacement 877 • Differential Repair 878 • Removing a Third Member 878 • Disassembling a Salisbury Axle 878 • Clean and Inspect Parts 879 • Differential Reassembly 880 • Adjusting a Differential 880 • Pinion Gear Depth 880 • Ring Gear Backlash 881 • Side Bearing Preload 881 • Contact Pattern 883 • Backlash Pattern Change 883 • Pinion Depth Pattern Change 883 • Pinion Bearing Preload 884 • Ring and Pinion Noise 885 • Four-Wheel-Drive Service and Repair 885

CHAPTER 53**Front-Wheel-Drive (Transaxle and CV Joint) Fundamentals 888**

Introduction 888 • Front-Wheel Drive 888 • Manual Transaxles 889 • Shift Linkage 889 • Transaxle Differential 890 • Transaxle Power Flow 891 • Automatic Transaxle 893 • Front Drive Axles 894 • Axle Shaft Parts 894 • CV Joint Construction 895 • Axle Shafts 897 • CV Joint Boots 897

CHAPTER 54**Front-Wheel-Drive (Transaxle and CV Joint) Service 898**

Introduction 898 • Transaxle and Front-Wheel-Drive Service and Repair 898 • Leaking CV Joint Boot 898 • CV Joint Boot Service 898 • Axle Inspection and Diagnosis 899 • CV Joint Diagnosis 899 • Axle Shaft Removal 900 • CV Joint Replacement 902 • Fixed Joint Disassembly and Inspection 903 • CV Joint Boot Clamps 905 • Servicing an Inner Tripod Joint 906 • Double Offset Plunge Joints 906 • Cross Groove Joint Service 907 • Rebuilt Halfshafts 907 • Installing the Axle 907 • Transaxle Repair 907 • Transaxle Removal 908 • Manual Transaxle Repair 908 • Automatic Transaxle Repair 908 • Transaxle Differential Side Bearing Adjustment 908 • Install the Transaxle 908

CHAPTER 55**Driveline Vibration and Service 910**

Vibration Analysis 910 • Types of Vibrations 911 • Vibration Test Instruments 912 • Vibration and Frequency 912 • Driveshaft Runout 914 • Other Causes of Vibration 914 • Driveshaft Balance 914 • Driveshaft Angle 916

**SECTION 10****ELECTRICAL SYSTEM THEORY AND SERVICE****CHAPTER 56****Basic Electrical System Theory and Repairs 919**

Introduction 919 • Electron Flow 919 • Basic Automotive Electrical System 921 • Electrical Terms 923 • Circuitry and Ohm's Law 926 • Magnetic Fields 927 • Capacitors 929 • Automotive Electronics 929 • Basic Electrical Tests 930

CHAPTER 57**Battery Fundamentals 938**

Introduction 938 • Battery Parts and Operation 939 • Battery Recharging and Discharging 941 • Battery Capacity Ratings 942 • Battery Types 944 • Battery Plate Size 946 • Battery Selection 946 • Battery Service Life 946 • Battery Cables 947 • Battery Holddowns 948 • Reasons for Battery Failure 948 • Hybrid Electric Vehicle and Other Battery Types 948

CHAPTER 58**Battery Service 951**

Introduction 951 • Battery Inspection 952 • Battery Service 952 • Replacing a Battery 954 • Battery Testing: Measuring a Battery's State of Charge 959 • Battery Charging 963 • Storing a Vehicle 965 • Battery Capacity Tests 965 • Battery Drain Test/Parasitic Load 967 • Battery Jump-Starting 968 • Hybrid Battery Service 969

CHAPTER 59**Starting System Fundamentals 972**

Introduction 972 • Starter Motor 972 • Starter Motor Fundamentals 972 • Starter Drives 975 • Starter Electrical Circuit 975 • Gear Reduction Starters 978 • Brushless DC Motors 979

CHAPTER 60**Starting System Service 980**

Introduction 980 • Starting System Service 980 • Starting System Tests 981 • Cranking Voltage and Amperage Test 982 • Circuit Resistance Test 982 • No-Crank Tests Using a Test Light 984 • Solenoid Problems 984 • Starter Repair 986 • Starter Disassembly 986 • Starter Drive Service 986 • Starter Reassembly 987 • Pinion Clearance Tests 988

CHAPTER 61**Charging System Fundamentals 989**

Introduction 989 • Charging System 989 • Direct Current (DC) Generators 989 • AC Generator/Alternator 990 • AC Generator Bearings 994 • Voltage Regulator 995 • Charging System Indicators 997 • High-Voltage Charging Systems 998

CHAPTER 62**Charging System Service 1001**

Introduction 1001 • Charging System Service 1001 • Testing the Charging System 1001 • Charging System Output Test 1002 • Diode Tests 1005 • Charging System Voltage Drops 1006 • AC Generator Service and Repair 1007 • AC Generator Reassembly 1010

CHAPTER 63**Lighting and Wiring Fundamentals 1011**

Introduction 1011 • Wire and Cable 1011 • Circuit Protection Devices 1012 • Lighting 1014 • Headlamps 1014 • Taillights 1019 • Light Bulb Identification 1020 • Fiber Optics 1021 • Turn Signals 1022 • Signal Flasher Operation 1022 • Hazard Flashers 1023 • Back-Up Lights 1023 • Wipers and Horn 1023 • Miscellaneous Gauges 1028

CHAPTER 64**Lighting and Wiring Service 1032**

Analyzing Electrical Problems 1032 • Wiring Service 1032 • Crimp Terminals 1034 • Selecting Replacement Wire 1036 • Adding Electrical Accessories 1036 • Soldering 1038 • Broken or Damaged Ground Straps 1040 • Circuit Testing and Service 1041 • Finding Grounds 1041 • Fuse Testing and Service 1041 • Fuse Link Service 1042 • Headlamp Service 1042 • Headlamp Aiming 1044 • Tail Lamp and Park Light Service 1047 • LED Service 1048 • Stoplight Switch Service 1048 • Back-Up Lights 1048 • Turn Signal Switch 1048 • Signal Flasher/Relay 1049 • Locating a Signal Flasher 1050 • Instrument Panel Bulbs 1050 • Windshield Washer Service 1050 • Horn Service 1050 • Gauge Testing 1051

CHAPTER 65**Safety, Security, Comfort Systems, and Electrical Accessories 1052**

Introduction 1052 • Supplemental Restraint Systems 1052 • Active and Passive Restraints 1053 • Restraint System Service 1063 • Security, Navigation, and Electrical Accessories 1065 • Security Systems 1066 • Vehicle Tracking/Navigation Systems 1070 • Other Comfort Systems 1072 • Cruise Control 1084 • Collision Avoidance Systems 1086 • Lane Departure Warning System 1087

**SECTION 11****HEATING AND AIR CONDITIONING****CHAPTER 66****Heating and Air-Conditioning Fundamentals 1089**

Introduction 1089 • Sources of Heat 1089 • Ventilation 1090 • Heating 1090 • Air Distribution

System 1091 • Air Conditioning 1092 • Air-Conditioning Principles 1093 • Heat Transfer 1093 • Humidity 1094 • States of Matter 1094 • Latent Heat 1094 • Air-Conditioning System Operation 1095 • Absorbing Heat 1096 • Reducing Humidity 1096 • Compressing the Refrigerant 1096 • Transferring Refrigerant Heat to Outside Air 1096 • Flow Control Devices 1098 • Air-Conditioning Compressors 1101 • Compressor Lubrication 1105 • Muffler 1105 • Accumulator or Receiver/Dryer 1105 • Evaporator Icing Control 1107 • System Switches 1108 • Heating and Air-Conditioning Controls 1108 • Automatic Air-Conditioning Sensors 1109 • Refrigerants and the Environment 1111 • Temperature and Pressure 1112

CHAPTER 67**Heating and Air-Conditioning Service 1114**

Heater Service 1114 • Air-Conditioning Service 1114 • Air-Conditioning System Service and Diagnosis 1115 • System Performance Test 1116 • Pressure Testing 1116 • Static Pressure Reading 1118 • Diagnosing HVAC Electronic Problems 1122 • Air Distribution System Diagnosis 1123 • Leak Detection 1128 • Common Air-Conditioning Component Problems 1130 • Refrigerant Oil 1131 • Evaporator Problems 1133 • Thermal Expansion Valve or Orifice Tube Problems 1133 • Compressor Service 1134 • Evacuating and Recharging 1138 • Vacuuming a System 1138 • Evacuate the System 1140 • Air-Conditioning Service Equipment 1141 • Refrigerant Charging 1141 • Follow-Up 1143 • Refrigerant Storage 1143 • Recycling and Retrofit 1143

**SECTION 12****ENGINE PERFORMANCE DIAGNOSIS: THEORY AND SERVICE****CHAPTER 68****Ignition System Fundamentals 1146**

Introduction 1146 • Basic Ignition System 1146 • Primary Circuit 1146 • Secondary Ignition Parts 1149 • Spark Plugs 1150 • Electronic Ignitions 1153 • Electronic Ignition Variations 1155 • Ignition Modules 1159 • Ignition Timing 1159 • Detonation Sensor 1161 • Distributorless Ignition 1161

CHAPTER 69**Ignition System Service 1166**

Ignition System Service and Repairs 1166 • Spark Plug Service 1166 • Spark Plug Diagnosis 1167 • Installing Spark Plugs 1169 • Repairing Damaged Spark Plug Threads 1171 • Spark Plug Cable Service 1171 • Distributor Ignition Service 1173 • Ignition Timing 1174 • Electronic Ignition Distributor Service 1174 • Other Distributor Repair Service 1176 • Distributor Installation 1176 • Static Timing 1176 • Electronic Ignition System Service 1177 • Types of Scope Patterns 1181 • Oscilloscope Tests 1182 • Other Scope Tests 1185 • Other Diagnostic Instruments 1185

CHAPTER 70**Petroleum Fuels and Alternative Fuel Technologies 1186**

Introduction 1186 • Crude Oil 1186 • Diesel Engines and Diesel Fuel 1189 • Gasoline 1191 • Air-Fuel Mixture 1193 • Spark Knocks, Carbon Noise, and Abnormal Combustion 1194 • Abnormal Combustion 1195 • Excessive Carbon Buildup 1198 • Regular versus Premium Fuels 1198 • Octane Standards 1199 • Gasoline Additives 1199 • Reformulated Gasolines 1199 • Oxygenated Fuels/Alcohols 1199 • Alternative Fuels 1201

CHAPTER 71**Fuel System Fundamentals 1206**

Introduction 1206 • Fuel System 1206 • Fuel Tanks 1206 • Fuel Lines, Hoses, and Fittings 1207 • Fuel Pumps 1207 • Fuel Filters 1208 • Fuel Injection and Carburetion 1209 • Pressure Regulator Operation 1214 • Electronic Fuel System Operation 1215 • Airflow Measurement 1216 • Idle Speed Control 1217 • Fuel Pump Control Module 1218 • Computer-Controlled Fuel Systems 1218 • Feedback Fuel Systems 1219

CHAPTER 72**Fuel System Service 1225**

Introduction 1225 • Fuel Supply System Service 1225 • Fuel Filter Service 1227 • Throttle Linkage 1229 • Carburetor Problems and Service 1229 • Exhaust Gas Analysis 1230 • Fuel Injection Diagnosis and Service 1231 • EFI Computer Self-Diagnostics (OBD) 1231 • Air-Fuel Mixture Problems 1231 • Injector Problems 1233 • Throttle Plate Service 1236 • EFI Adjustments 1237 • Sensor Service 1237 • Throttle Position Sensor 1237 • Oxygen Sensor Service 1238 • Coolant Temperature Sensor 1239 •

Inlet Air Temperature Sensor 1240 • MAP Sensor Diagnosis 1240 • Mass Airflow (MAF) Sensor Diagnosis 1241 • Testing Other Sensors 1241 • Computer Service 1242 • Mechanical Injection 1242 • Carbon Deposit Service 1243

CHAPTER 73**Intake and Exhaust Systems/Turbochargers and Superchargers 1244**

Introduction 1244 • Intake System Fundamentals 1244 • Manifolds 1245 • Intake Manifolds 1245 • Exhaust System Fundamentals 1249 • Exhaust Manifolds 1249 • Exhaust Pipes 1250 • Exhaust System Service 1252 • Turbochargers and Superchargers 1253 • Turbochargers 1254 • Belt-Driven Superchargers/Blowers 1263

CHAPTER 74**Emission Control System Fundamentals 1267**

Introduction 1267 • Air Pollution 1267 • Automotive Emissions 1267 • Pollution Control 1269 • Automobile Emission Control Systems 1269 • Crankcase Ventilation 1270 • Air Injection System 1272 • Aspirator Valve or Pulse Air System 1273 • Exhaust Gas Recirculation 1273 • EGR System Operation 1274 • Computer-Controlled EGR Systems 1275 • Catalytic Converter 1276 • Types of Catalytic Converters 1277 • Evaporative Controls 1279 • Other Parts of the Fuel Tank System 1282 • On-Board Diagnostics 1283 • Engine Emission Modifications 1283

CHAPTER 75**Emission Control System Service 1285**

Introduction 1285 • Inspecting Emission Control Systems 1285 • Computer-Controlled Emission Service 1286 • Crankcase Ventilation System Service 1286 • Evaporative Control System Service 1287 • Evaporative System Maintenance 1288 • Evaporative System Problem Diagnosis 1288 • EGR System Service 1290 • Air Injection System Service 1292 • Catalytic Converter Service 1293 • Converter Testing 1293 • Catalytic Converter Replacement 1293 • Analyzing Exhaust Emissions 1294 • Emission Analyzers 1295 • Hydrocarbons 1296 • Carbon Monoxide (CO) 1297 • Carbon Dioxide 1297 • Oxygen (O₂) 1299 • Oxides of Nitrogen 1299 • Catalytic Converter Tests 1301

CHAPTER 76**Electronics and Computer Systems Fundamentals 1305**

Introduction 1305 • Semiconductors 1305 • Diodes 1306 • Transistors 1308 • Electronic Instrument

Displays 1309 • Automotive Computer Systems 1309 • Parts of a Computer System 1310 • On-Board Computer 1310 • Information Processing 1312 • Computer Memory 1312 • Communication Rate 1314 • Sensors and Actuators 1314 • Types of Sensors 1315 • Thermistors 1315 • Voltage Dividers 1315 • Piezoelectric and Piezoresistive Sensors 1316 • Heated Resistive Sensors 1316 • Variable DC Frequency Sensors 1316 • Voltage Generators 1316 • Wheatstone Bridges 1317 • Switches 1317 • Types of Actuators 1318 • Solenoid Actuators 1318 • Relay Actuators 1319 • Motor Actuators 1319 • Actuator Switches/Modules 1319 • Adaptive Strategy 1319 • Ignition Advance 1320 • Knock Sensor 1320 • Electronic Throttle Control/Drive-by-Wire 1320 • On-Board Diagnostics 1321 • Diagnostic Trouble Codes 1321 • Computer Self-Diagnostics 1321 • Multiplexing 1322 • Network Sizes and Types 1323 • CAN Systems 1323 • Supplemental Data Bus Networks 1327 • Telematics 1329 • Wireless Networks 1329

CHAPTER 77

Electronics and Computer Systems Service 1330

Introduction 1330 • Inspection Sequence 1330 • Perform Diagnostic Tests 1332 • On-Board Diagnostics 1332 • Reading Trouble Codes 1333 • Scan Tools 1333 • Breakout Box 1335 • Retrieving Trouble Codes 1335 • Working with Codes 1335 • Erasing Trouble Codes 1335 • Scan Tool Snapshot 1336 • Closed Loop 1338 • Fuel Trim Diagnosis 1338 • Digital Waveforms 1340 • Logic Probe/Power Probe 1343 • Sensor and Actuator Testing 1344 • Diagnosing Sensor Problems 1344 • Sensor Tests 1345 • Oxygen Sensor 1345 • Load

Sensors 1347 • MAP Sensor 1348 • BARO Sensors 1348 • Vacuum Sensors 1348 • Throttle Position Sensor 1349 • Coolant Temperature Sensor 1349 • Air Temperature Sensors 1351 • Airflow Sensor Service 1352 • Knock Sensor Service 1352 • Actuator Service 1353 • Repair the Problem 1353 • Computer Wiring Service 1354 • Static Electricity 1357 • Electrical Damage to a Circuit 1358

CHAPTER 78

Advanced Emissions and On-Board Diagnostics (OBD) 1361

Introduction 1361 • History of On-Board Diagnostics 1361 • OBD II Operation 1362 • Society of Automotive Engineers (SAE) Standards 1363 • Trouble Codes and the Malfunction Indicator Lamp 1365 • OBD II Codes 1366 • OBD II Diagnostic Testing 1367 • Emission Testing Programs 1375

CHAPTER 79

Diagnosing Engine Performance Problems 1378

Introduction 1378 • Visual Checks 1378 • Ignition System Checks 1378 • Engine Performance Testing 1379 • Compression Loss 1379 • Vacuum Testing 1380 • Other Vacuum Tests 1381 • Compression Problems 1382 • Cylinder Leakage Test 1384 • Carbon-Related Problems 1385

REVIEW QUESTIONS 1386

APPENDIX 1459

GLOSSARY 1471

INDEX 1509

NOTE TO STUDENT: *Learn to use the index. It has been constantly updated and will help you find what you need in the book.*